

We can supply our tools with or without electrical and pneumatic dress up. If no valves or electrical connection box is included in the offer/order, there is no dress up done when the tool is shipped. What will be there are pipe connections on pneumatic cylinders, and sensors. If valves and an electrical terminal or box is included, we will wire and dress up the tool and also label the hoses and wires. If any special labeling should be required we need to be notified. The blower always comes with its own connection box. The reverse blow unit comes with a valve and cylinder sensors, but no connection box.

